


ORIGINAL **EXTRUFIX**
Kitchen Rack™

INSTRUCTIONS: PADS OR SCREWS


STEP 1 — INSTALLATION

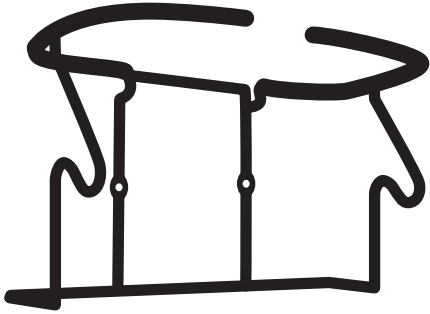

Clean/dry install site. Attach lid to back wire. Hold unit against door close to hinge and check to ensure door will close.




STEP 2

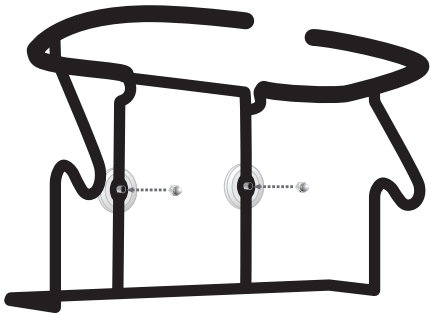

PADS

Attach pads to rack with tail pointing down. Firmly tighten nut - pliers may be used. Mark position, install.

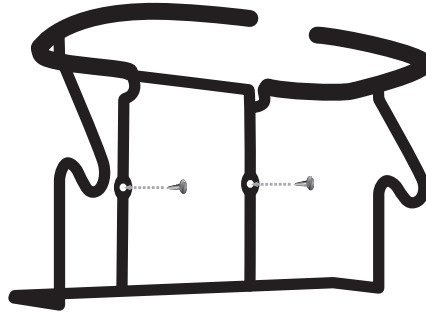


SCREWS

Mark screw positions and attach (if door is thin, use appropriate number of washers* to compensate).

**Washers not included.*


STEP 3

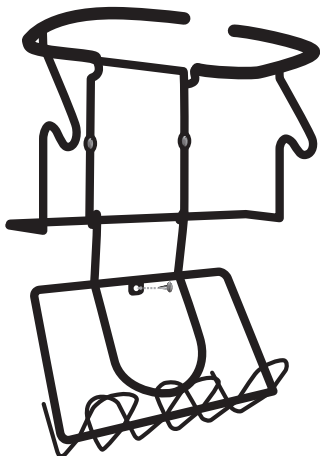

Hang lower unit on rack. Attach with pads or screws (if using pads, press out any air bubbles).

USAGE

1

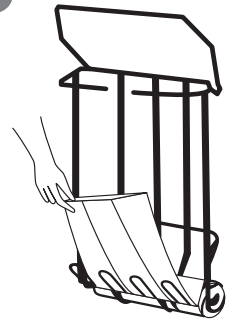

2



3



4

